


# **BHE-400 SUPER SOUND BEEPER**

## **CONTENTS**

The following items are included in the package, as shown on the photo below: SUPER SOUND BEEPER BHE-400, USB charger, USB wire and magnet.

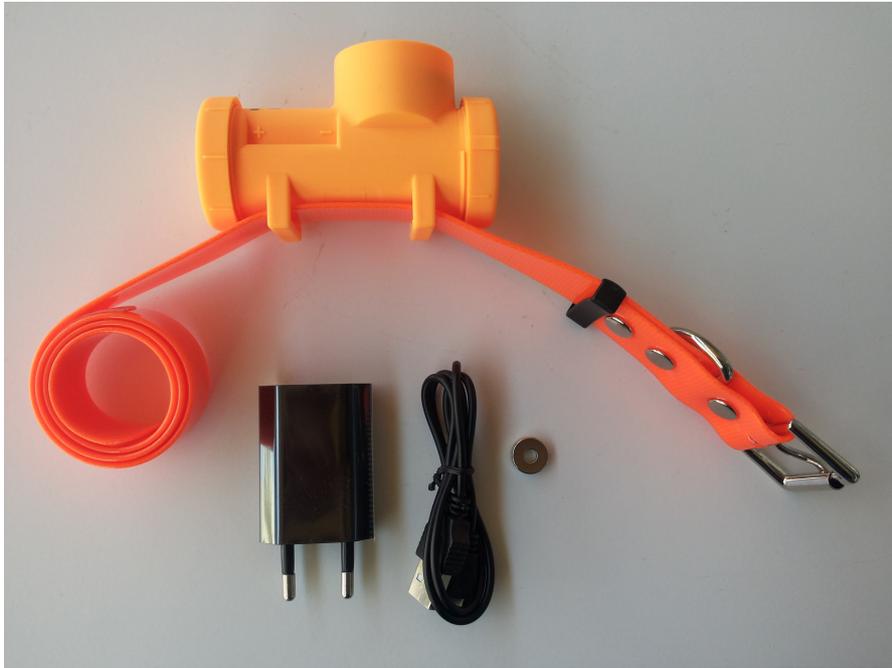

## **FEATURES**

The **SUPER SOUND BEEPER BHE-400** is used to locate your dog in mountains or forests during hunting.



This specific beeper has several features; it has two rotary switches. Open the lid (the one which writes HUNTER 400 BEEP) by turning it anti-clockwise. As you can see on the photo above, the left rotary switch with the numbers is used to select the sound of the beeper. The beeper has four sounds. The right rotary switch is used to set the mode of the beeper.

The right rotary switch has three modes (10, 20, 30) and the Point Only Function (P).

When the switch is rotated to **10**, the beeper is set to mode **Beep with Point and Run**. In this mode it beeps quickly while the dog is pointing, and when the dog is running the beeper beeps every 10 seconds.

When the switch is rotated to **20**, the beeper is set to mode **Beep with Point and Run**. In this mode it beeps quickly while the dog is pointing, and when the dog is running the beeper beeps every 20 seconds.

When the switch is rotated to **30**, the beeper is set to mode **Beep with Point and Run**. In this mode it beeps quickly while the dog is pointing, and when the dog is running the beeper beeps every 30 seconds.

When the switch is rotated to **P**, the beeper is set to **Point only Function**. In this function, the beeper beeps only when the dog is pointing.

Left rotary switch with numbers:

When the switch is rotated to number “**1**”, you can hear the standard beep tone.

When the switch is rotated to number “**2**”, you can hear the Bob White Bird Call.

When the switch is rotated to number “**3**”, you can hear the Hawk-scream Bird Call.

When the switch is rotated to number “**4**”, you can hear the Trill Tone.

In addition, the beeper has a switch to adjust the volume of the sound. It has two scales. Low and high volume (LOW, HIGH).

After you have chosen the appropriate setting, close always tightly the lid, so the water cannot penetrate, and the beeper will be totally waterproof (IP67).

## **TURNING ON/OFF BEEPER**

The BHE-400 BEEPER, is provided with a magnetic ON/OFF switch. Hold the magnet provided, at the charging lid, for 1 sec. You will hear four beeps. The beeper has been activated. Remove the magnet. In order to switch off the beeper, you hold again the magnet at the charging lid for 1 sec. You hear 2 sets of three beeps. The beeper has been deactivated. Remove the magnet.

## CHARGING THE BEEPER



Open the charging lid, by turning it anti-clockwise, and connect the USB charger, as it is shown on the photo above. The battery needs to be charged for 5-6 hours. After charging the battery, close the charging lid, by turning it clock-wise. The charging lid should be closed tightly so the water cannot penetrate, and the beeper will be totally waterproof (IP67).

## TIPS AND TAKING CARE OF YOUR PRODUCT

- Clean the beeper with a damp cloth
- Check periodically that the lids are closed tightly. It is very important to close them tightly, so the beeper is totally waterproof (IP67).
- The beeper locator should be placed on the top of the dog's neck (behind his head).

## WARRANTY

We offer one-year warranty, and quick service after its end. The warranty does not cover the built-in rechargeable battery.