 


## Fitting the Collar

The collar strap should be adjusted so that the contact points are held firmly against the dog's skin. Fasten the collar enough to allow one or two fingers to fit between the collar strap and your dog's neck.

If the collar is too loose, it will be ineffective because there is no contact between the dog's skin and the contact points.

Collar should not be used for more than 10 hours per day. If a rash develops, discontinue to use.



## Regular Maintenance

1. Check Contact Points for tightness weekly, do not over tighten.
  2. Clean Contact Points with alcohol weekly.
  3. Replace battery when it required.  
(Note: make sure the collar is turned off for checking and cleaning.)
  4. Check your dog's neck for irritation and wash neck weekly.
- ★ Notice: The manufacturer preserve the right to make changes to improve the quality of the product without notice.



No Bark Collar: 3.7V 140mAh LiP



No Bark Collar


PET854



Owner's Manual

## Main Features

1. Rechargeable and waterproof collar
2. Static mode for training
3. 4 levels of auto intelligent corrections
4. 7 sensitivity settings for different dog's temperament
5. LED indicator for battery and operation
6. Small and light weight collar
7. Auto-protection mode to protect your pet

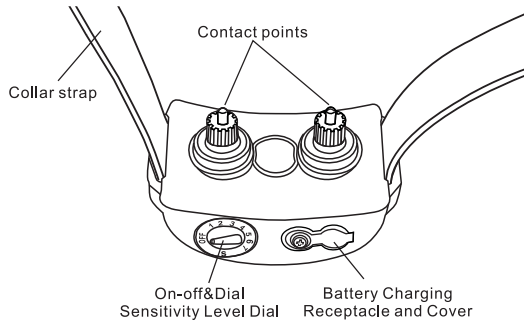


## ON-OFF & Intensity Dial

The ON-OFF & Sensitivity Dial on the collar is used to turn the No Bark Collar on and select the sensitivity level.

Set the ON-OFF & Sensitivity Dial to the "OFF" position to turn off the No Bark Collar.

The sensitivity dial is used to adjust the sensitivity level of the static sensor. Level 7 is the highest sensitivity and level 1 is the lowest. This means the collar is easy to activate in level 7 and less chance to activate at level 1.

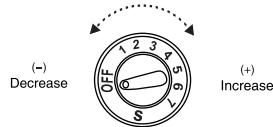

## Automatic Intensity of Electric Shock

1. The Intensity of Electric Shock increases automatically and progressively by the detection of bark frequency, up to 4 levels and 7 times.
2. If the No Bark Collar does not keep activating for 20s, the system will go back to the intensity level 1.

## Auto-Protection Mode

After the collar keeps activating for 7 times, it stop working to protect the dog and the LED indicator will turn to a blinking red light for 1 minute, this means the collar goes to auto-protection mode.

## When to Charge

Before going to auto-protection mode, if the LED indicator turns to a blinking red light, it means the battery needs to be charged. When starting to charge, the LED indicator will stay on red light. And after full charged, the red light will turn off.



## Testing

1. Turn the collar on by turning ON-OFF & Sensitivity Dial and set the Sensitivity level to 7.
2. Scratching the surface of the test tool on the collar by using a finger nail or a pen. The LED indicator flashes Red and the test light flashes to indicate the collar is working.

