

**Notice:**

**This Leash-Walking Training Controller could work with our IS-PET998D Remote Training System and IS-PET998DR Waterproof and Rechargeable Remote Training System**

**The Leash-Walking Training Controller works with the PET998D Remote Training System  
(Range up to 300 Meters)**



**The Leash-Walking Training Controller works with the PET998DR Waterproof and Rechargeable Remote Training System (Range up to 300 Meters)**



**Petainer®**

## **Leash-Walking Training Controller PET899**



**Owner's Manual**

## Mode Setting

There are two strength modes to train the different dogs refrain from excessive straining against leash.

### a. Small Strength Mode - Green LED Light (Mode S)

At the Small Strength Mode, once the Leash-Walking Training Controller detects the excessive straining against the leash, there is a vibration for 10 seconds, and if the strength against the leash is not getting small, the Leash-Walking Training Controller will send the signal to let the training collar have medium level of static stimulus, the Leash-Walking Training Controller will detect every 1 minutes to repeat the procedures.

### b. Heavy Strength Mode Red LED Light(Mode H)

Press “M” Button at the right side of the Leash-Walking Training Controller and the LED light will change from Green LED light (Mode S ) to Red LED Light (Mode H).

At the Heavy Strength Mode, only once the Leash-Walking Training Controller detects the heavy excessive straining against the leash, the training collar will start to have 10 seconds strong static stimulus, and the Leash-Walking Training Controller will check every one minute to repeat the procedures.

### c. Turn off the Leash-Walking Training Controller

To Turn off the Leash-Walking Training Controller , please press “M” Button till the Led light turned off.

## Set the Leash-Walking Training Controller to work with our PET998D Training Collar

a. Make sure the Leash-Walking Training Controller has installed the batteries correctly.


b. Install the batteries in the receiver collar, and it should beep once the batteries are installed

c. Press the M button on the right side of Leash-Walking Training Controller and there is a beeper to indicate that they are connected successfully.



**Please repeat the above procedures, if they are connected successfully.**

## Set the Leash-Walking Training Controller to work with our PET998DR Waterproof and Rechargeable Training Collar

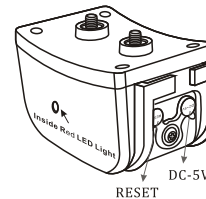

a. Lift the Reset part of Rubber cover in the Collar Receiver.

b. With a pen or paper clip, press the Reset Button inside the Collar Receiver.

c. After a beep from the Collar Receiver, press the M button on the right side of Leash-Walking Training Controller and there is a beeper to indicate that they are connected successfully.