

 
# 3 IN 1 DIGITAL COMPASS

## USER MANUAL

MODEL: ZD-2018

### General description

The multifunctions digital compass is using last electromagnetic sensing technology. The function is include compass, thermometer, time and calendar. It is a good device for outdoor (motoring,boating,camping, hunting and mountaineering).

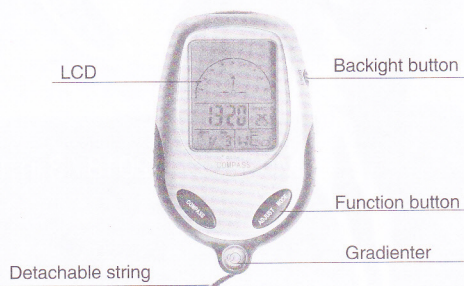

-1-

### Functions and technical specifications

-Compass

Accuracy of  $\pm 3^\circ$

Resolution of  $1^\circ$

Display mode:  $360^\circ$  with 9 cardinal point segments.

-Thermometer

Accuracy of  $\pm 2^\circ$  C.

Resolution of  $1^\circ$  C

Temperature format:  $^\circ$  C or  $^\circ$  F

Range: from  $-5^\circ$  C to  $50^\circ$  C.

-Calendar

With month, date, time and week.

Time format: 24H or 12H(AM/PM).

-LCD display

Display with LED backlight(blue).

-Power supply

Two "AAA" batteries.

 
### Operation

#### Compass:

1.Place the battery in battery compartment once,the LCD will display "CAL" icon ,

-2-

the 9 cardinal point segments will flash.It means that the calibration mode of compass is on.At this time,keep the device be parallel with horizontal plane and turn the compass one complete revolution slowly(It is probably easier to turn your body rather than your hand). Then, you can press the "COMPASS" button to finish calibration,and the compass is normal working.(Note:For more accurate results, The air bubble of the gradienter should be kept inside the circle during the calibration procedure).

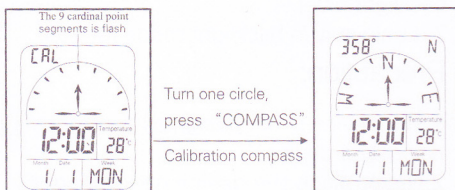

2.During use the compass,if you found the accuracy of compass is destroyed.You can press the "COMPASS" button and hold it for 4s to enter calibration mode.-----  
Reference step 1.


-3-

3.The device is only stay in compass mode for 4 minutes for save power.Until the "COMPASS" button was be pressed again.

#### Thermometer:

 1.The LCD is display air temperature in Celcius ( $^\circ$  C).This is the default mode of the device.

2.You can press the "ADJUST" button switch to Fahrenheit( $^\circ$  F)

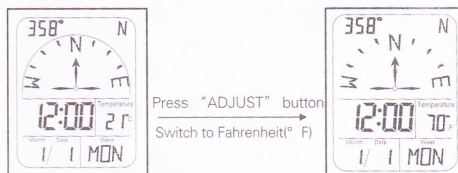

#### Time and Calendar:

1. 24H is The default time format.

2.You can press the "MODE" button and hold for 4s enter seting the time and calendar mode.In this time,the hour's digit will flash. Press the "ADJUST" button to change the "Hour" digit;

-4-

Press the "MODE" button, the "Minute" digit will blink. Press the "ADJUST" button to change the "Minute" digit;

 
Press the "MODE" button. Next, Press the "ADJUST" button to switch 24H or 12H;

Press the "MODE" button, the "Month" digit will blink. Press the "ADJUST" button to change the "Month" digit;

Press the "MODE" button, the "Date" digit will blink. Press the "ADJUST" button to change the "Date" digit;

Press the "Week" digit will blink. Press the "ADJUST" button to change the "Week" digit;

If you press "MODE" button again, it will return to setting "Hour" mode. It will finish setting the time and calendar if you press the "MODE" button for 4s.

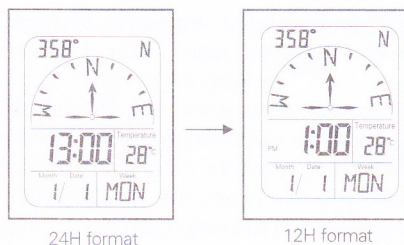

24H format

12H format

### Backlight:

1. Use the device in night, you can press the "LIGHT" button to illumine the backlight (blue).

2. It only stay in backlight mode for 15s.

### Precaution:

1. The device is not design as commercial navigation device.

2. Never place the device near magnetic field equipment.

3. Keep away your digital compass from much moisture and humidity situation. Avoid direct water exposure.

 
4. Use your digital compass Within

temperature range(-5° C to 50° C).

5. Always place your digital compass horizontally when using.

## Multifunction Digital Compass

(Incl. compass, thermometer, time and calendar)

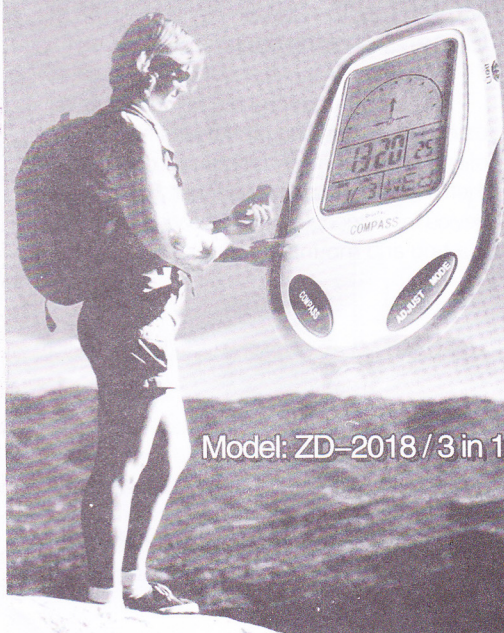

Model: ZD-2018 / 3 in 1