


# 036 Dog Walking Training Device

Training ways:  
vibration and electronic stimulus 2 strength modes to suit for the different dogs.

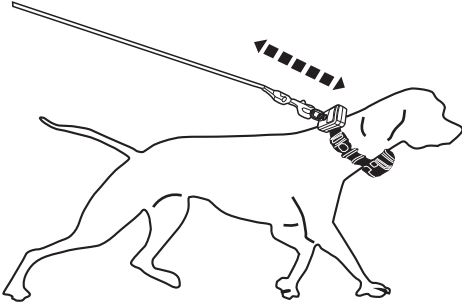

· 1 ·

pulling force larger than 5KG, the collar will shock; If the pulling force larger than 15KG, the frequency of shock will become quicker;press the button again, the indicate light will change to red light, red light means in the mode of vibrate.

## How to Charging it

Once the red light becomes quick flash, it means donot have enough power, then you need get the collar charging;you need a 5v charger, connect the USB cable with collar and the charger, once the green light quick flash, it means in the time of charging, once keep on green light, then means fully charging.

· 3 ·

## To Turn the collar on

- 1、 Press and Hold the button on for 1.5 seconds, the red light will flash 2times, red light means on the mode of vibrate; the red light will flash every 3 seconds in the standby time; If the pulling force larger than 5KG, the collar will vibrate.
- 2、 If the red light flash quick, it means you need charging the collar, the collar is lack of power.

## How to change the working Mode

Shortly press the button(less than 1.5 seconds), the indicate light will change to green light, green light means in the mode of Shock; the green light will flash every 3 seconds in the standby time; Once the


· 2 ·

## Sleep mode

No any pulling force in 10 minutes, the collar will go to sleep; in sleep mode, the light(no matter red or green light) will flash every 6 seconds; Once the pulling force larger than 1kgs, the collar will start work again.

## Package

Collar *1	Neon light*1
User Manual*1	Short&Long Probes *2
Strap*1	Pulling Controller*1

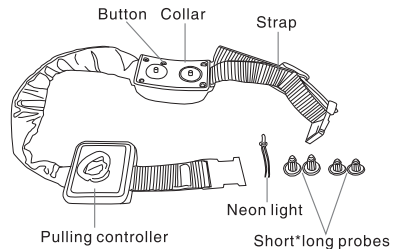

· 4 ·